



DISHWASHER

Open the water connection from the kitchen tap (on/off switcher) before starting the dishwasher. Close the connection after program has finished.

SELECETORS



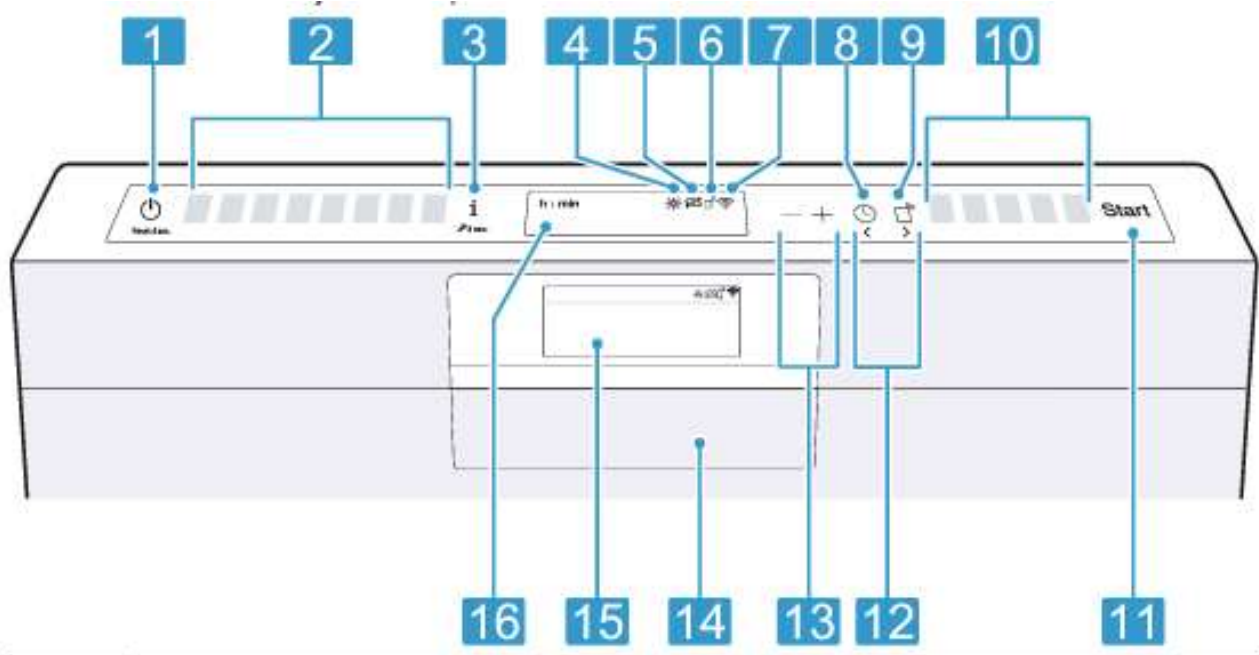




- | | |
|--|--|
| 1. ON/OFF  and reset button (Reset 4 sec.) | 9. Remote Start |
| 2. Programme button | 10. Programme buttons and additional functions |
| 3. Info button | 11. Start button |
| 4. Rinse aid refill indicator | 12. < > buttons |
| 5. Special salt refill indicator | 13. Setting buttons |
| 6. Display Remote Start | 14. Door handle |
| 7. WLAN display | 15. Display |
| 8. Timer programming | 16. Display |

USE

1. Open the water connection.
2. Turn on the device by pressing the ON/OFF switch.
3. Adjust the desired program by pressing the right program selector → The program is set and the program selector flashes.
4. You can set additional functions to complete the washing programme selected. The additional functions which can be used depend on the programme selected.
5. (Adjusting the timer; you can postpone the start of the washing program by a total of 24 hours. Press the Timer button and then + or – repeatedly until the appropriate time is displayed.)
6. Press the Start button.
7. The appliance door opens automatically during the drying phase.
8. The program is finished when "Valmis!" is displayed.
9. Close the water connection.
10. Turn off the device by pressing the ON/OFF switch.




PROGRAMMES

You can find an overview of the programmes that can be selected here. Different programmes, which can be found on the control panel of your appliance, are available depending on the appliance configuration. The running time may vary depending on the programme selected. The running time depends on the water temperature, the quantity of tableware, the level of soiling and the Additional function. The running time will change if the rinse aid system is switched off or rinse aid needs to be added.

Programme	Use	Programme sequence
AUTO Auto 35-45°C	Tableware: ▪ Delicate tableware, cutlery, temperature-sensitive plastics, glasses and stemware Level of soiling: ▪ Lightly adhering fresh food remnants	Sensor-controlled: ▪ Optimised by sensors depending on the soiling of the washing water.
AUTO Auto 45-65°	Tableware: ▪ Mixed tableware and cutlery Level of soiling: ▪ Common household food remnants lightly dried on	Sensor-controlled: ▪ Optimised by sensors depending on the soiling of the washing water.
AUTO Auto 65-75°	Tableware: ▪ Pots and pans, non-fragile tableware and cutlery Level of soiling: ▪ Stubborn, burned or dried-on food remnants containing starch and protein	Sensor-controlled: ▪ Optimised by sensors depending on the soiling of the washing water.
 Eco 50°	Tableware: ▪ Mixed tableware and cutlery Level of soiling: ▪ Common household food remnants lightly dried on	Most economical programme: ▪ Pre-Rinse ▪ Cleaning 50 °C ▪ Intermediate rinse ▪ Final rinse 35 °C ▪ Drying
 Quick Wash 45°C	Tableware: ▪ Delicate tableware, cutlery, temperature-sensitive plastics and glasses Level of soiling: ▪ Lightly adhering fresh food remnants	Time-optimised: ▪ Cleaning 45 °C ▪ Intermediate rinse ▪ Final rinse 50 °C
 Machine Care	Use only if appliance is unloaded.	Machine Care 70 °C
 Personalisation function	- → "Personalisation function  ", Page 20	-

ADDITIONAL FUNCTIONS

You can find an overview of the additional functions that can be selected here. Different additional functions, which can be found on the control panel of your appliance, are available depending on the appliance configuration. You can select certain additional functions depending on the programme.

Symbol	Additional function	Use
	Half Load	<ul style="list-style-type: none">■ Switch on with small loads.■ It is recommended adding less detergent to the detergent dispenser than for a full machine load.■ The running time is shortened.■ Water and energy consumption are reduced.
	Intensive	<ul style="list-style-type: none">■ Switch on with mixed loads containing tableware with different soiling levels, e.g. place very soiled pots and pans in the bottom basket and normally soiled tableware in the top basket.■ The spray pressure in the bottom basket is increased and the maximum programme temperature maintained longer. This will increase the running time and energy consumption.
	Power	<ul style="list-style-type: none">■ The run time is shortened by 15% to 75%¹ depending on the rinse programme.■ The additional function can be activated before the start of the programme and at any time when the programme is running.■ Energy and water consumption are increased. <p>If you select this additional function, automatic door opening in the "On with Eco 50°" setting is deactivated.</p>

¹ Depending on the appliance specifications