


WASHING MACHINE SIEMENS

NOTE! Turn on the water connection of the washing machine by pressing the button above the washing machine. After pressing, the water connection is on for 4 hours and then closes by automatically.

OPERATIONS

Control panel

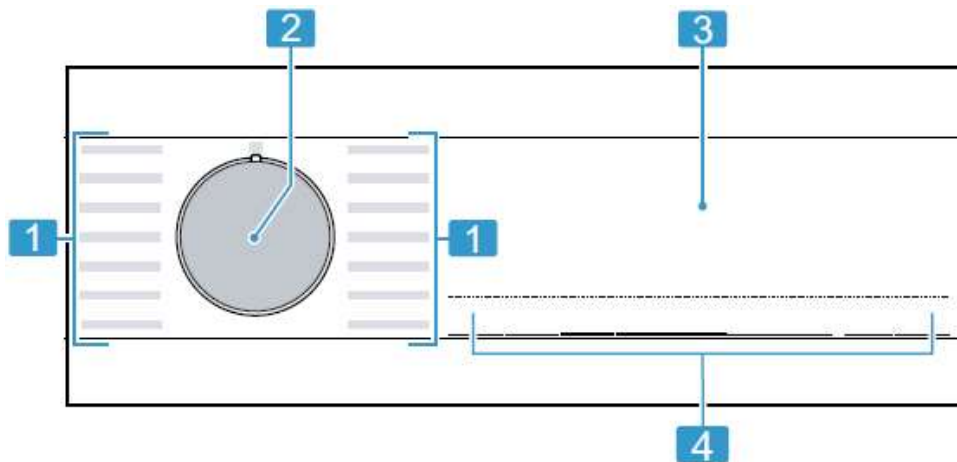

1. Programmes
2. Programme selector
3. Display
4. Buttons

DAILY USE

Remember to turn on the water connection of the washing machine first

1. Turn the programme selector to a desired programme
2. Use the buttons to change the program settings if needed.
3. Press ► .
4. When the program has ended, turn off the machine by turning the programme selector to ○.

Childproof lock

Secure your appliance against being operated unintentionally using the controls.

14.1 Activating the childproof lock



- ▶ Press and hold the two 🔒 3s buttons for approx. 3 seconds.
- ✓ The display shows 🔒 3s.
- ✓ The controls are locked.
- ✓ The childproof lock remains active even after the appliance has been switched off and in the event of a power failure.

14.2 Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.

- ▶ Press and hold the two 🔒 3s buttons for approx. 3 seconds.
- ✓ 🔒 3s goes out in the display.

Programmes

Programme	Description	Max. load (kg)
Bomuld (Cotton)	Wash hard-wearing items made from cotton, linen or blended fabrics. Also suitable as a short programme for normally soiled laundry when you activate Speed Perfect. Programme setting: <ul style="list-style-type: none"> Max. 90 °C Max. 1400 rpm 	9,0 5,0 ¹
Eco 40-60	Wash items made from cotton, linen or blended fabrics. Note: Fabrics which can be washed from 40 °C  up to 60 °C  as per the care symbol can be washed together. The washing performance corresponds to the best possible washing performance class according to the legal requirements. For this programme, the washing temperature is automatically adjusted depending on the load size, in order to achieve the best possible energy efficiency with the best possible washing result. You cannot change the washing temperature. Programme setting: Note: The temperature cannot be adjusted in this programme and is set automatically. <ul style="list-style-type: none"> Max. - °C Max. 1400 rpm 	9,0
Forvask (Prewash)	Wash hard-wearing items made from cotton, linen or blended fabrics. Programme with prewash for heavily soiled laundry. Divide the detergent between the detergent drawer for the prewash and the main wash. → "Detergent drawer", Page 18 Programme setting: <ul style="list-style-type: none"> Max. 90 °C Max. 1400 rpm 	9,0 5,0 ¹
¹ Speed Perfect activated ² Washing not possible		
Strygelet (Easy Care)	Wash items made from synthetic or blended fabrics. Programme setting: <ul style="list-style-type: none"> Max. 60 °C Max. 1200 rpm 	4,0
Mix	Wash items made from cotton, linen, or synthetic or blended fabrics. Suitable for lightly soiled laundry. Programme setting: <ul style="list-style-type: none"> Max. 60 °C Max. 1400 rpm 	4,0

Finvask/Silke (Delicate/Silk)	Wash delicate, washable items made from silk, viscose and synthetic fabrics. Use a detergent that is suitable for delicates or silk. Note: Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag. Programme setting: ■ Max. 40 °C ■ Max. 800 rpm	2,0
Uld (Wool)	Hand- or machine-washable items that are made from wool or contain wool. To prevent the laundry from shrinking, the drum moves the items very gently with long pauses. Use a detergent that is suitable for wool. Programme setting: ■ Max. 40 °C ■ Max. 800 rpm	2,0
Skyllning (Rinse)	Rinse and then spin the laundry, and drain the water. Programme setting: Max. 1400 rpm	–
Centrifugering / Udpumpning (Spin/Drain)	Spin and drain the water. If you only want to drain the water, activate Ø. The laundry is not spun. Programme setting: Max. 1400 rpm	–
Hygiejne (Hygiene)	Wash hard-wearing items made from cotton, linen or blended fabrics. Suitable for allergy sufferers and for strict hygiene requirements.	–
¹ Speed Perfect activated		
² Washing not possible		

Note: Once the set temperature has been reached, it remains constant throughout the entire washing process.


Programme setting:

- Max. 60 °C
- Max. 1400 rpm

Outdoor Im- prægning (Outdoor/Water- proof)	Wash all-weather and outdoor clothing with membrane technology and water-resistant equipment. Suitable for washing and then waterproofing. Use a detergent for outdoor fabrics. Use a waterproofing agent that is suitable for machine-washing. Do not use fabric softener. Place the detergent for outdoor fabrics in compartment II in the detergent drawer and the waterproofing agent in the Ø compartment. → "Detergent drawer", Page 18 After-treat the laundry in accordance with the manufacturer's instructions. Programme setting: ■ Max. 40 °C ■ Max. 800 rpm	1,0
Jeans Mørkt tøj (Tummat tek- stiilit)	Wash dark-coloured and colour-intense items made from cotton or easy-care fabric, e.g. jeans. Turn laundry inside-out before washing. Use liquid detergent. Programme setting: ■ Max. 40 °C ■ Max. 1200 rpm	4,0




Tromler- engøring (Drum Clean)	<p>Cleaning and caring for the drum. _2</p> <p>Use this programme in the following cases:</p> <ul style="list-style-type: none"> ■ Before using the appliance for the first time ■ If you regularly wash at temperatures of 40 °C or lower ■ After a prolonged period of non-use <p>Use washing powder or a detergent that contains bleach. Halve the amount of detergent to avoid foaming. Do not use fabric softener.</p>	
<p>¹ Speed Perfect activated</p> <p>² Washing not possible</p>	<p>Do not use liquid detergent or detergent that is intended for woollens or delicates.</p> <p>Note: The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time.</p>	
Super 15'/30' (Super 15'/30')	<p>Wash items made from cotton, or synthetic or blended fabrics. 4,0</p> <p>Short programme for small items of lightly soiled laundry.</p> <p>The programme duration is approx. 30 minutes. If you wish to reduce the programme duration to 15 minutes, activate Speed Perfect. The maximum load is reduced to 2,0 kg.</p> <p>Programme setting:</p> <ul style="list-style-type: none"> ■ Max. 40 °C ■ Max. 1200 rpm 	
<p>¹ Speed Perfect activated</p> <p>² Washing not possible</p>		

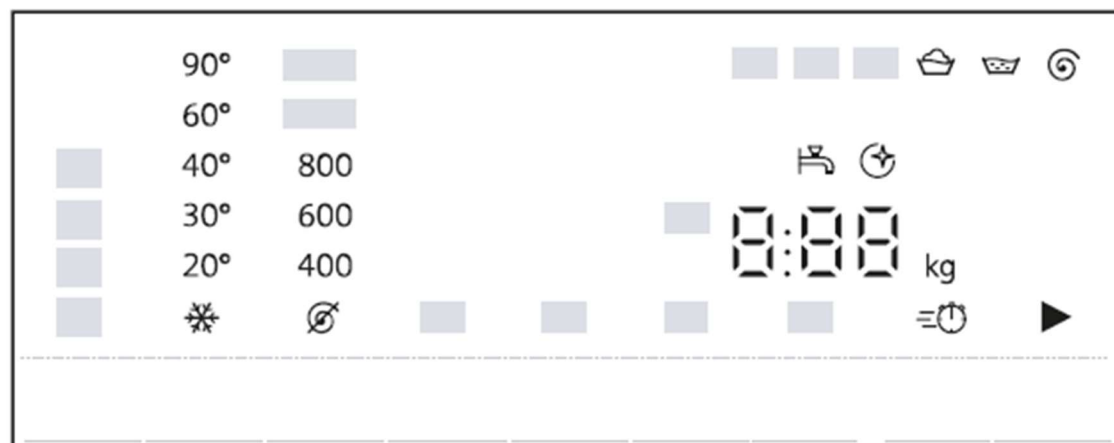Display












Example: Display

display	Designation	More information
0:40 ¹	Programme duration/programme time remaining	Approximate expected programme duration or programme time remaining.
+ 10 ¹	"Ready in" time	→ "Buttons", Page 23
9,0 kg ¹	Recommended load	The maximum load capacity for the selected programme in kg.
Ø - 1400 Ⓢ	Spin speed	Set spin speed in rpm. → "Buttons", Page 23 Ø: No spin cycle, draining only
* - 90	Temperature	Set temperature in °C. → "Buttons", Page 23 * (cold)
▶	Start/Pause	Start, cancel or pause <ul style="list-style-type: none"> ■ Lights up: The programme is running and can be cancelled or paused. ■ Flashes: The programme can be started or continued.
⏸	Prewash	Programme status
🧺	Wash	Programme status
¹ Example		
🧺	Rinse	Programme status
Ⓢ	Spin	Programme status
End	End of programme	Programme status
🔑 3s	Childproof lock	<ul style="list-style-type: none"> ■ lights up: The childproof lock is activated. ■ flashes: The childproof lock is activated and the appliance has been operated. → "Deactivating the childproof lock", Page 32
🧺	Crease-reduction function	The crease-reduction function is activated. → "Buttons", Page 23
🧺	Water Plus and Rinse Plus	Wash with more water and a rinse cycle is activated. → "Buttons", Page 23
⏸	Rinse Hold	Rinse Hold is activated.
⏸	varioSpeed	Short wash activated. → "Buttons", Page 23

	Reminder to clean the drum	Flashes: Drum is dirty. Run the Tromler-engøring programme for cleaning and caring for the drum and the outer tub. → "Cleaning the drum", Page 34
:	Voltage control system	Flashes: The automatic voltage control system detects impermissible voltage drops. This will pause the programme. Note: The programme will continue when the voltage is permissible again.
.	Voltage control system	Flashes: The programme has been paused because of impermissible voltage drops. The voltage is permissible again and the programme will continue. Note: The programme duration is extended.
	Adding laundry	The programme can be interrupted and laundry can be added. → "Adding laundry", Page 31
¹ Example		
	Door	<ul style="list-style-type: none"> ■ Lights up: The door is locked and cannot be opened. ■ Flashes: The door is not closed properly. ■ Off: The door is unlocked and can be opened.
	Tap	<ul style="list-style-type: none"> ■ No water pressure. ■ The water pressure is too low.
E:35 / -10 ¹	Error	Error code, error display, signal.
¹ Example		

Buttons

Button	Selection	More information
 (Start/Reload)	<ul style="list-style-type: none"> ■ Start ■ Cancel ■ Pause 	Start, cancel or pause the programme.
Speed Perfect	<ul style="list-style-type: none"> ■ Activate ■ Deactivate 	Activate or deactivate a shorter programme duration. Note: Energy consumption increases. The washing result is not affected by this.
 (Ready in)	Up to 24 hours	Set the programme end. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.
°C (Temperature)	 - 90 °C	Adjust the temperature in °C.
 (Spin speed)	 - 1400 rpm	Adjust the spin speed or deactivate the spin cycle. If  is selected, the water is drained and the spin cycle is deactivated. The laundry stays wet inside the drum.
 3s (Child Lock 3 sec.)	<ul style="list-style-type: none"> ■ Activate ■ Deactivate 	→ "Childproof lock", Page 32
 (Water & Rinse Plus)	<ul style="list-style-type: none"> ■ Activate ■ Deactivate 	Activate or deactivate a washing programme with more water and an additional rinse cycle. Recommended for particularly sensitive skin or in regions with very soft water.
 (Easy Iron)	<ul style="list-style-type: none"> ■ Activate ■ Deactivate 	Activate or deactivate the reduced creasing programme. In order to reduce creasing in the laundry, the spin cycle and the spin speed are adapted. The laundry is damp enough after washing that it needs to be hung out on a washing line.