


# DRYING CABINET ELECTROLUX

## CONTROL PANEL

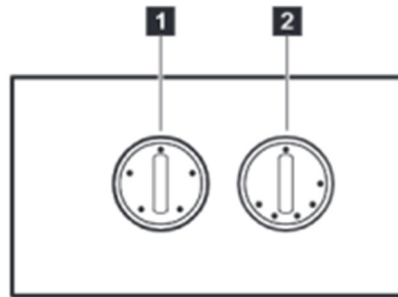

**1** Time control knob: time can be set for up to 4 hours.


**2** Temperature control knob: temperature can be set between 30 - 70°C

←  
**Recommended  
temperature  
40°C - 50°C**

If a fast drying results desired, turn the temperature control knob to the max and set the timer control knob to two hours.

## HINTS AND TIPS

- All types of washing, wet clothes, shoes and equipment can be dried just as gently as required in a drying cabinet.
- The load should be hung up to dry in a way which allows air to circulate efficiently. Items should be distributed evenly throughout the drying cabinet.

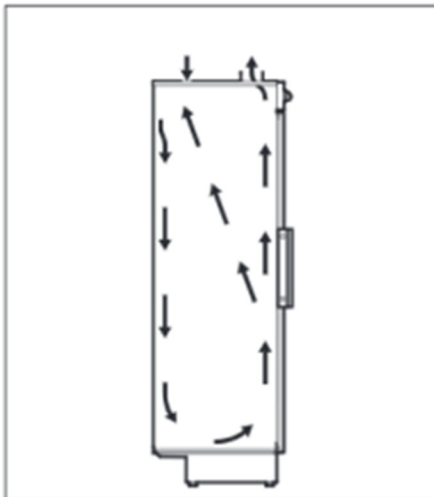

Guidelines in the absence of labelling:

- Cotton and linen 70°C
- Synthetics, wool, silk 30 – 50°C
- When drying shoes or boots, the base of the drying cabinet can be protected with newspaper or equivalent, which can be discarded later.

Using a drying cabinet allows you to control not only the drying time and temperature, but also the level of energy consumption. The drying cabinet has a built-in thermostat and timer. The temperature control knob has a range of 0 – 70°C, and the timer can be set for up to 4 hours. The drying cabinet is started and stopped by means of the timer control.

- Do not overload the hangers. Use more than one arm on the hangers to support heavy items.
- The temperature used must not be too high for the specific load. Garment care labels may provide useful information on suitable temperatures.
  - ☺ To be dried at "normal" temperature 70°C
  - ☹ To be dried at "low" temperature no more than 50°C

In houses with mechanical ventilation systems there is frequently the option of accelerating the total exhaust air flow from the ventilation system. If experience shows that the air humidity is frequently too high when the drying cabinet is in use, this humidity can be reduced significantly if the air flow is accelerated at the start of the drying time.