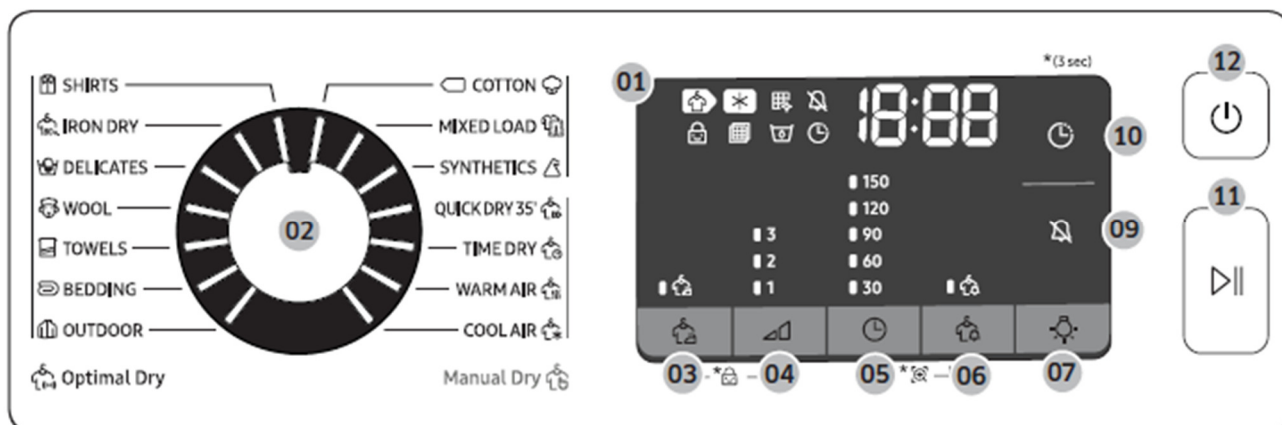 

 



 








HEAT PUMP DRYER SAMSUNG


 
 
 
 
 
 

Control panel




01 Digital Graphic Display	Displays all cycle information, including cycle time, information codes, and dryer status. See the table below for status details.			
		Drying		Cooling
		Heat-exchanger clean alarm		Sound on/off
		Child Lock		Check filter alarm
		Water Tank Full		Delay End
		Wrinkle Prevent		Damp Alert
		Smart Check		
02 Cycle Selector	Turn the dial to select a cycle. See the Cycle overview on page 35 for available cycles.			
03 Wrinkle Prevent	Adds approximately 3 hours of intermittent tumbling at the end of the selected cycle to reduce wrinkles. A large circle appears in display panel, and the drum rotates intermittently. To activate, press Wrinkle Prevent. The corresponding indicator lights up.			
04 Drying Level	Press to select the dryness level in the SHIRTS, COTTON, MIXED LOAD, and SYNTHETICS cycles. The dryness can be set in three levels (1-3). Level 1 is used to partially dry items that lay flat or hang to dry. Level 3 is the strongest and is used to dry larger or bulk loads.			
05 Time	Press to adjust the cycle time for TIME DRY, WARM AIR, and COOL AIR cycles. The following time options (unit: minute) are available: 30, 60, 90, 120, and 150. <ul style="list-style-type: none"> 120 minutes and 150 minutes are not available for WARM AIR and COOL AIR cycles. The exact drying time differs depending on the humidity of the load. 			





 

06  Damp Alert	This alarm is available only with  SHIRTS,  COTTON,  MIXED LOAD, and  SYNTHETICS cycle. If a load contains mixed fabrics, the Damp Alert indicator () blinks when the average dryness of the item is 80 % dry. This lets you take items that you don't want fully dried or that dry quickly out of the dryer early while letting others continue to dry.
07  Lamp (DV9*TA*****/ DV8*TA*****)	Press to turn on or off the interior lamp. The lamp stays lit for 2 minutes after it has turned on, and then turns off automatically.
08  Smart Check (DV7*TA*****)	If the dryer has detected an issue, Smart Check allows you to check the status of the dryer using a smart phone.
09  Sound On/ Off	Press to mute/unmute the alarm. The sound setting is retained when you turn the dryer off and turn it on again.
10  Delay End	You can adjust the finish time of the selected cycle in 1-hour increments all the way up to 24 hours.
11  Start/Pause (Hold to Start)	Press to start or pause a cycle. If the dryer is running, press the button once to pause the dryer. Press again to resume.
12  Power	Press to turn the dryer on/off. If the dryer turns on for 10 minutes without any button being pressed, the dryer automatically turns off.






Use

1. Press  Power to turn the dryer on.
2. Load the dryer and close the door.
3. Turn the Cycle Selector to select a cycle.
4. Change the cycle settings ( Drying Level, and  Time) as necessary.
5. Select necessary settings and options to your preference. ( Wrinkle Prevent,  Lamp,  Damp Alert, and/or  Delay End).
6. Press and hold  Start/Pause (Hold to Start). The dryer indicator lights up, and the estimated cycle time appears on the display.




 




Cycle overview

Optimal dry 

Cycle	Description	Max load (kg)
 SHIRTS	Use to quickly dry one item such as a shirt.	2
 IRON DRY	This cycle finishes the drying process in a moist state, which facilitates ironing.	4
 DELICATES	For items to be handled with care such as lingerie.	2
 WOOL	For machine washable and tumble dryable wool only. For best results, turn laundry inside out before drying.	1
 TOWELS	Use to dry loads such as bath towels.	4
 BEDDING	For bulky items such as blankets, sheets, comforters, and light duvets.	2

 OUTDOOR	For outdoor wear such as skiwear and mountain clothing, and also for fabrics such as spandex, stretch, and microfiber. It is recommended to use this cycle after you have washed your laundry using the OUTDOOR cycle with your washing machine.	2
 COTTON 	For lightly cottons, bed linen, table linen, underwear, towels, and shirts.	MAX
 MIXED LOAD	For mixed loads consisting of cotton and synthetic fabrics.	MAX
 SYNTHETICS	For lightly soiled blouses, and shirts that are made of polyester (Diolen, Trevira), polyamide (Perlon, nylon), or other similar blends.	4



Manual dry

 QUICK DRY 35'	For drying light cotton synthetics or items that needs quick drying. The default Time is 35 minutes.	1
 TIME DRY	Use to set a desired Time. <ol style="list-style-type: none"> 1. Turn the Cycle Selector to select  TIME DRY. 2. Press  Time to set the drying time between 30 minutes and 150 minutes. Keep pressing Time cycles through the available time options in 30-minute increments. <p> NOTE The actual cycle time may differ depending on the dryness of items.</p>	-
 WARM AIR	For small, pre-dried items. The Time defaults to 30 minutes. Timed cycle for all types of fabric except for wool and silk. Dry laundry that is still slightly damp or has already been pre-dried. Also suitable for the subsequent drying of multi-layered, thick laundry that does not dry readily. <p> NOTE This cycle is suitable for drying individual woollen fabrics, sports shoes and soft toys. Only dry these using the basket for woollens.</p>	-
 COOL AIR	All types of fabric. For freshening up or airing items of laundry that have not been worn for long.	-


Special features

Delay End


You can set the dryer to complete a selected cycle at your set time.



 
1. Select a cycle with necessary options.
2. Press the - or +  Delay End buttons to set a time between 1 to 24 hours in 1-hour increment.
3. Press and hold  Start/Pause (Hold to Start). The corresponding indicator blinks, and the clock begins counting down to the set time.

NOTE

To cancel the Delay End settings, restart the dryer using the  Power button.

Child Lock

Child Lock prevents children from playing with the dryer. When Child Lock is activated, all buttons except for the  Power button are disabled.

To activate/deactivate Child Lock, simultaneously press and hold  Damp Alert and Smart Control or  Wrinkle Prevent and  Drying Level for 3 seconds.

NOTE

If Child Lock is activated, and the dryer is turned off and then on again, Child Lock remains activated.