 
 
COOKER HOOD









Operating switches

Button A: Turns the light OFF **Button B:** Turns the light ON

Display L: Displays the automatic operating mode of the sensor ("A" will show). Displays the automatically selected engine speed (1-4).

Button C: Decreases engine speed and turns the system OFF. (If the automation finds it necessary, the cooker hood will restart at the speed selected by the sensor.)

Button D: Increases engine speed and turns the system ON. (The speed is then adjusted to the speed selected by automatic function.)

Button D: Activates and deactivates the automatic function. When this functions is activated, display C will show "A" and the engine spped will increase and decrease automatically according to fumes and gases.

To optimize energy consumption, speed 4 (ventilation maxpower) automatically adjusts to speed 3 after 5 minutes. If the cooker hood is left on (light and/or fan) and is not adjusted during 10 hours, the device will automatically switch to OFF mode after this time, and all functions will shut down.

GENERAL VENTILATION

The ventilation of the apartment is controlled from the digital controller on the wall downstairs. Ventilation system cannot be turned off completely, it always operates at least at minimum power. Especially when you are having sauna (and also ½ hour after that) it is important to set the ventilation to a higher power (press boost button or adjust to power 3-5). If there is a bad air, hot or many people in the apartment, you can boost the ventilation by setting it at higher power. At night and when absence, set the ventilation power to position 1. Other times, you can use ventilation with the normal setting 2-3.

When using the fireplace, turn on the fireplace switch from the switch next to the fireplace (or downstairs digital controller) by pressing the fireplace switch icon. The fireplace function is on approx 15 minutes at a time and after that ventilation returns to normal mode. If the fireplace does not pull properly, press the fireplace switch again.

When not staying in the apartment you can put the "away" function on by pressing the Home/Away icon. (Human character inside the house = Home and human character outside the house = Away)



Touch screen buttons:



Home/Away -function



Fireplace switch



Ventilation maxpower
Tehostus