


DRYING CABINET

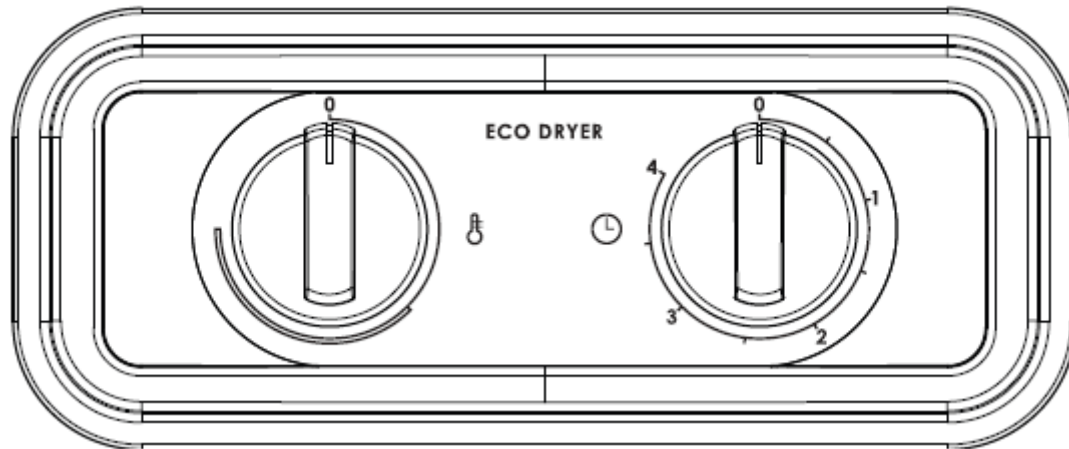

Left switch = Thermostat

Right switch = Timer

The load should be hung up to dry in a way that allows air to circulate efficiently. Items should be distributed evenly throughout the dryer. Do not overload the dryer racks.

The dryer has a built-in thermostat and timer. The dryer is started and stopped by means of the timer control.

When using the drying cabinet, please turn the ventilation from the cooker hood to maximum.

If the dryer stops heating:

Most of the times clothes are too wet or the dryer is overloaded. In this case, the thermal cutout is cutting the power. Open the door and wait 5 minutes, then turn the dryer on again.