 



COOKING TOP

Please do not place anything on top of the touch buttons!

Cook top

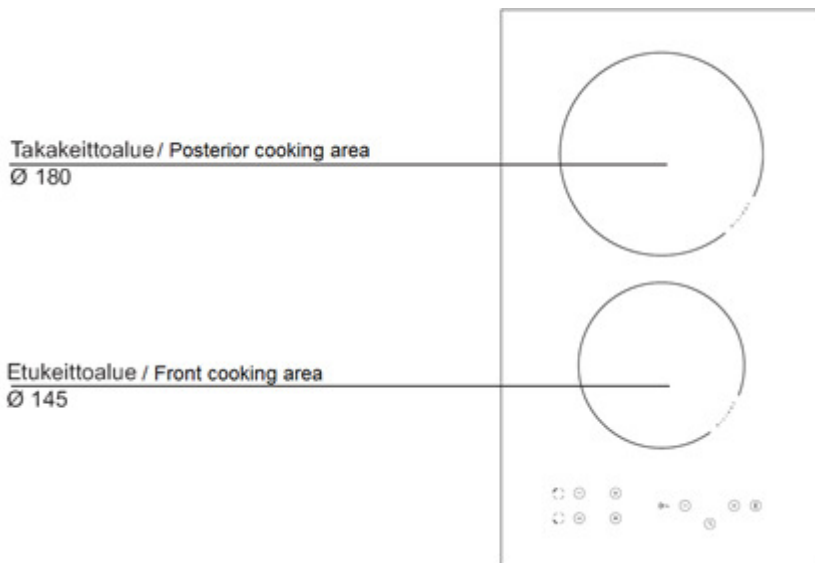

 Control panel

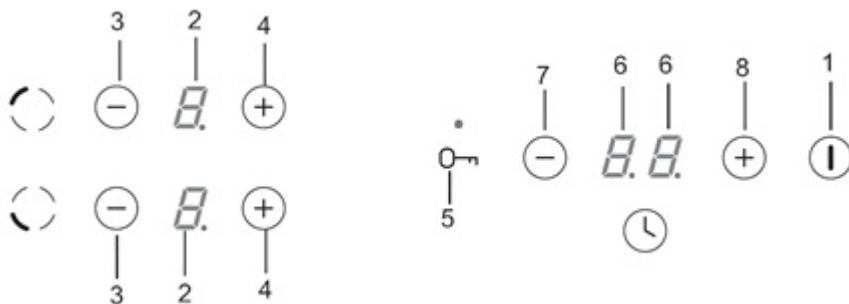

1. Pääkytkin / Main switch
2. Näyttö / Screen
3. Tehon - näppäin / - Power switch
4. Tehon + näppäin / + Power switch

5. Avaimen näppäin, Merkkivalo / Key button, indicator light
6. Näyttö / Screen
7. Toimintoajan - näppäin / - Function Time
8. Toimintoajan + näppäin / + Function Time

Activating the cook top


When the cook top is not activated, all the sections are turned off and the indicator lights are off. Press the main switch and the cook top will be activated. "0" will be shown on each screen for 10 seconds. Press the selection key of the cook top. You can adjust the power with the "+" and "-" buttons. You have to use the "+" and "-" buttons while the 0 shows on the screen, otherwise the cook top will be deactivated



When the cook top is activated (at least one cooking area is activated) you can activate other cooking areas by pressing + or - buttons. Crease or increase heat by using + or - buttons.

Switching off the cook top

The cook top is activated when at least one section is turned on. Turn off the power of the whole cook top by pressing the main switch. "H" sign will show up to demonstrate the residual heat.

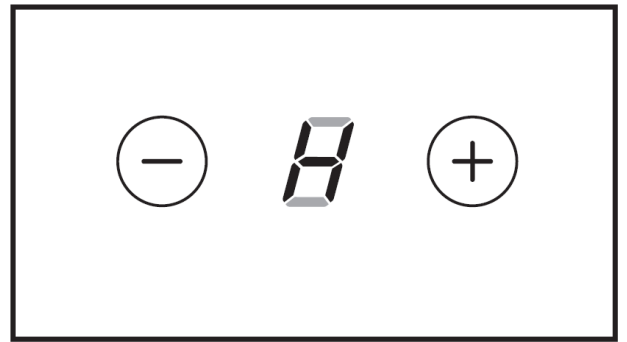

If you want to deactivate only one section:

- Press the "+" and "-" signs at the same time
or
- Turn the power to 0 with the "-" sign.

"H" will show up to demonstrate the residual heat.



Locking

It is possible to lock the cook top to make it safer for the kids and pets by pressing the key button. If you lock all the sections of the cook top, it is impossible to activate the cook top. In order to activate the cook top, the locking needs to be deactivated.

To activate the lock, press the key button until the indicator light is on. You will hear a short signal when pressing the button.

To deactivate the lock, press the key button until the indicator light is off. You will hear a short signal when releasing the button.