 


WASHING MACHINE ELECTROLUX

Open the water connection for the washing machine (on/off switch on the wall). Close the connection after program has finished. ➔

CONTROL PANEL

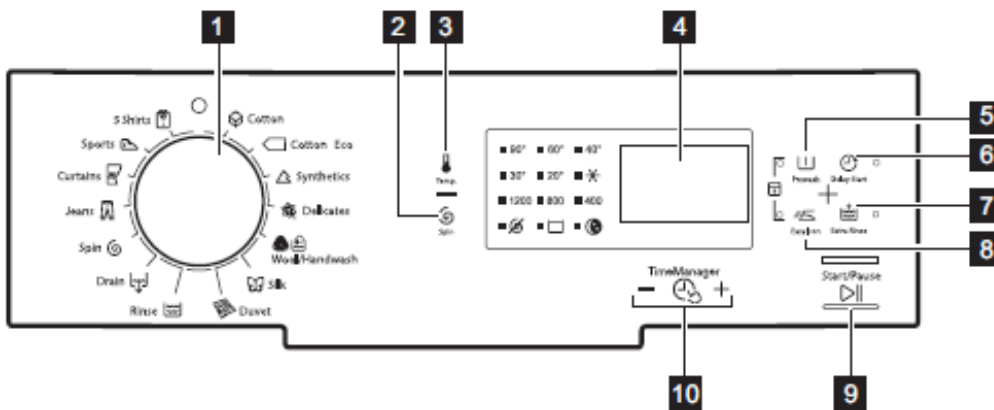 


1. Program selector
2. Lower spin touch button
3. Temperature touch button
4. Screen
5. Prewash touch button
6. Delay start touch button
7. Extra rinse touch button
8. Easy Iron touch button
9. Start/Pause touch button
10. Time Manager touch button

- A) Time screen
 - Program time
 - Error codes
 - Time manager level
- B) Timer sign light
- C) Kid-lock sign light
- D) Lid-lock light

- Note that you can't open the machine when sign light is on. If it is blinking, wait few minutes and the sign light will come off and you can open the machine.

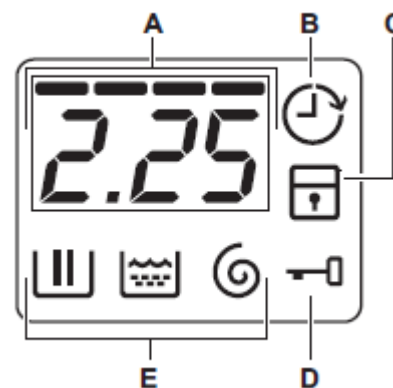

 

 


 





- E) Program step sign lights
 - wash step
 - rinse step
 - spin step



Using the machine

1. Turn the water connection on.
2. Make sure the drum and lid are properly closed.
3. Turn the program selector and set the program. Change temperature and/or spin speed if necessary.
4. Press Start/Pause button. Program starts and the lid locks.
5. The machine will stop automatically and the lid unlocks when the program is complete.
6. Remove the laundry and make sure the drum is empty.
7. Turn the water connection off.
8. Turn the machine off by turning the program selector to position o.
9. Leave the lid slightly open.

PROGRAMMES

 Puuvilla Eco ¹⁾ 60 °C - 40 °C	Bomull
 Keinokuidut 60 °C - kylmä	Synthetic fibre
 Hienopesu 40 °C - kylmä	Delicates
 Villa/Käsi- npesu 40 °C - kylmä	Wool/Hand wash
 Siikki 30 °C	Silk
 Peitot 60 °C - 30 °C	Blankets
 Huuhtelut Kylmä	Rinsing
 Tyhjennys	Draining
 Linkous	Spinning
 Farkut 60 °C - kylmä	Jeans
 Verhot 40 °C - kylmä	Curtains
 Urheilu 30 °C	Sport
 5 Paitaa 30 °C	Shirts