

INDUCTION COOKING TOP

Please note: Do not place anything on top of the touch buttons!





Description

Quick cooking area (posterior right)

Quick cooking area (posterior left)

Quick cooking area (frontal left)

Quick cooking area (frontal right)

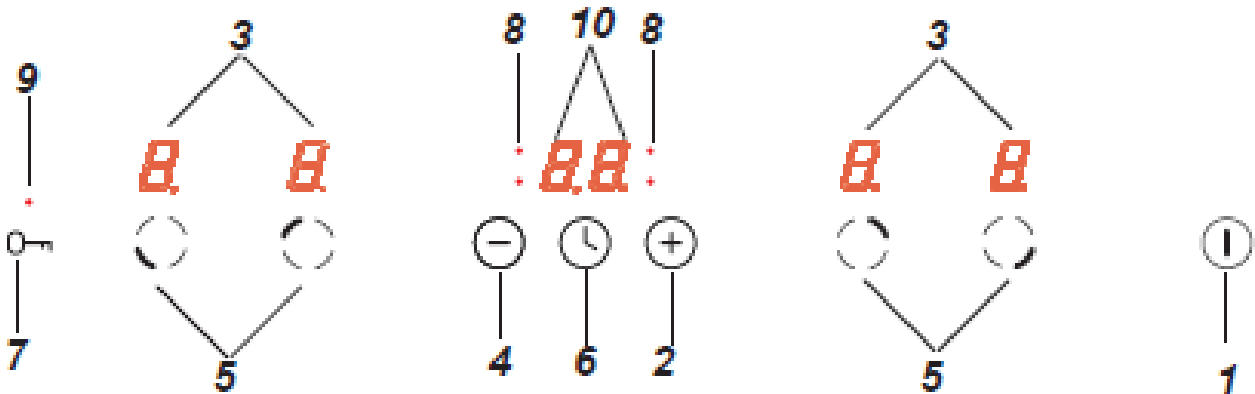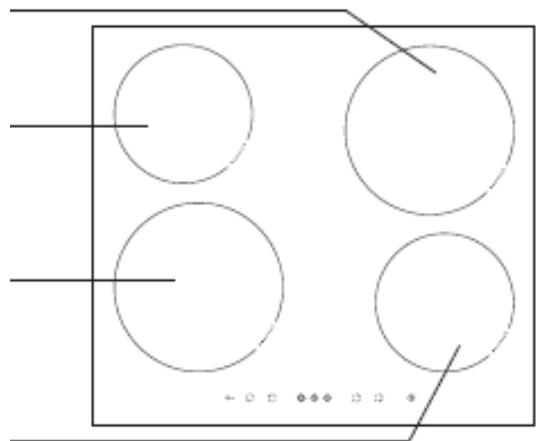

Control panel

1. Switch
2. + Heat sensor
3. Cooking zone sign light
4. - Heat sensor
5. Cooking zone selection sensor
6. Timer sensor
7. Kid-lock sensor
8. Timer sign light
9. Kid-lock sign light
10. Timer screen

Activating the cook top

When the cook top is not activated, all the zones are turned off and the indicator lights are off.

Press the on/off switch (1) and the cook top will be activated. "0" will be shown on each screen (3) for 10 seconds. Press the selection sensor (5) from the cooking area you want to use. You can adjust the heat with the "+" (2) and "-" (4) buttons.

You have to use the "+" and "-" buttons while the 0 shows on the screen, otherwise the cook top will be deactivated.

Switching off one cooking area

Touch the selection sensor (5) for 3 seconds.

Switching off the cook top

1. Touch on/off switch (1).
2. "H" sign will show up to demonstrate the residual heat (3).

Locking the cook top

It is possible to lock the cook top to make it safer for the kids and pets by pressing the key button (7) for 5 seconds. Now the kid-lock sign light (9) is on and the cook top is locked. In order to activate the cook top, the locking needs to be cut off.

Unlocking the cook top

Press the kid-lock sensor (7) for 5 seconds. Kid-lock sign light (9) goes off and you can start using the cook top.