


# OVEN GRAM

## DESCRIPTION

1. Oven temperature controller
2. Oven function controller
3. Oven temperature sign light
4. Digital clock/timer

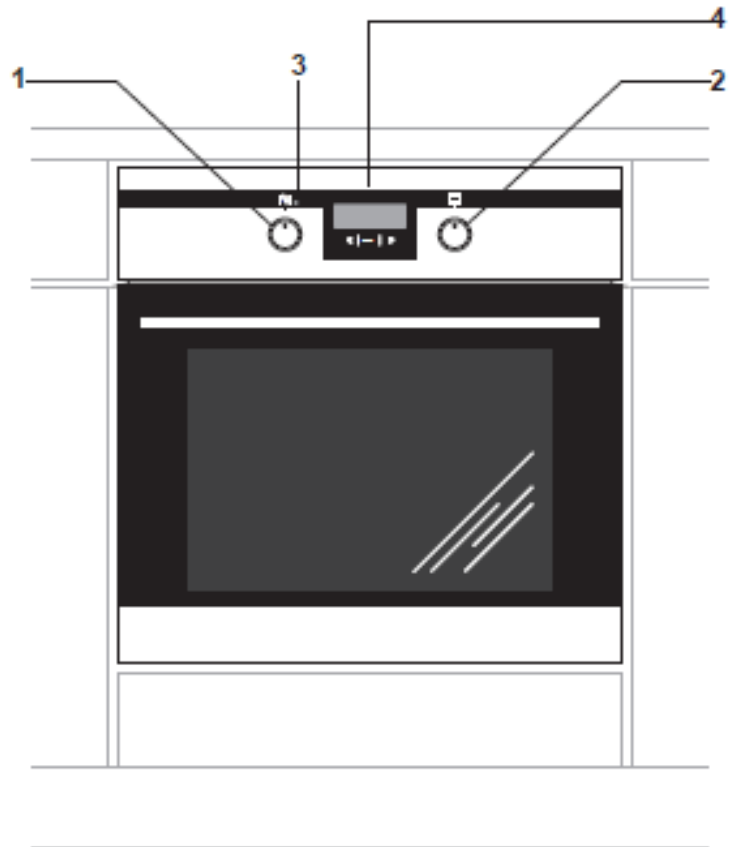


## USING THE OVEN

### Oven functions and cooking

Lightly press the function controller (2) to activate the oven. The oven function icons are displayed on the side of the knob. The oven can be heated by a lower heating resistor, top heating resistor, grill element or fan-assisted resistor. The oven is controlled by turning the function controller (2) to the chosen function and oven temperature controller (1) as chosen temperature. To switch off the oven turn both controllers to 0 position.

Note! The oven starts to warm up only when when the temperature is set.

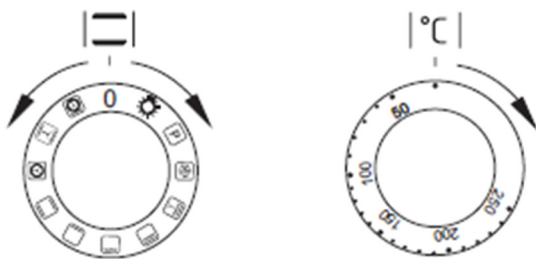

## Function controller



**Oven light** - Only the oven light comes on



**Fan** - Use this function to defrost breads and pastries



**Fan and grill** - Grilling goes faster. Suits to roast meat.



**Supergrill** - Upper resistor and grill.



**Grill** - Only the grill resistor is on.



**Lower heat** - Only lower heat resistor is on



**Conventional heating** - Upper and lower heat



**Fan-assisted heat**



**Fan, upper and lower heat on**



**Pizza function** – Fan, fan-assisted heat and lower heat is on

### **Sign light**

Sign light (3) is on when oven is heating up and it goes out when the oven has reached the temperature you selected.

### **Turning off the oven**

Turn the oven off by turning both controller knobs (1,2) to position "0" / "0".