


MICROWAVE OVEN

Control Panel

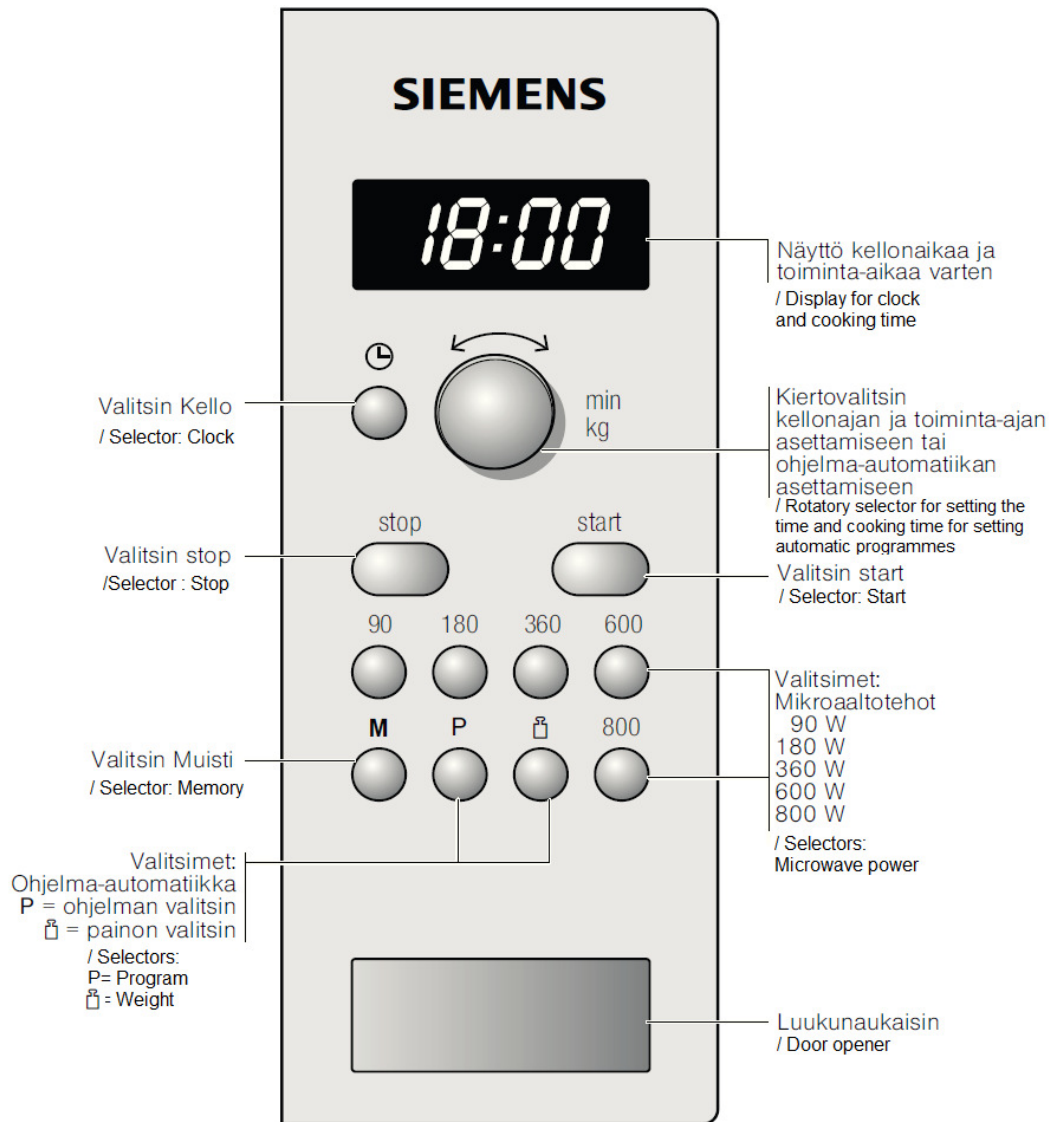


Rotatory selector

Use the rotatory selector to change all suggested and set values. The rotatory selector can be pushed in. Press to lock and unlock the selector.

Please note: Do not use the appliance if the turntable is not in place. Ensure that it is properly slotted into place. The turntable can turn clockwise or anti-clockwise.

Setting the microwave

1. Press the required microwave power setting. The display will show a sign of 1:00 min.
2. Set a cooking time using the rotatory selector.
3. Press start. The cooking time counts down in the display.

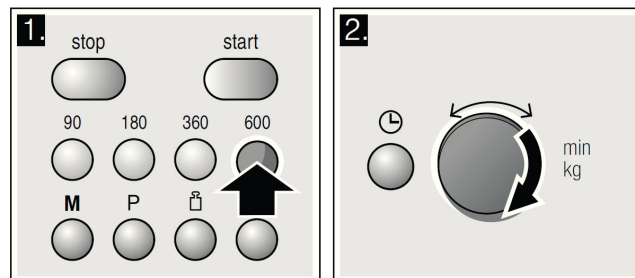

The cooking time has elapsed

An audible signal sounds. Open the appliance door or press Stop. The clock appears.

Changing the cooking time

This can be done at any time. Change the cooking time using the rotatory selector.

Pausing

Press Stop button once or open the appliance door. Operation is suspended. After closing the door, press the Start button again.

Cancelling operation

Press the Stop button twice or open the door and press the Stop button once.

Note: You can also adjust the cooking time first and then the microwave power setting.