

DISHWASHER

Open the water connection from the kitchen tap (on/off switcher). Close the connection after program has finished.



USE

1. Open the water connection.
2. Turn the programme selector clockwise until the desired program number is next to program mark.
3. Press the power switch; the power switch indicator will light up and the washing program will start automatically.
4. At the end of the washing program, press the power switch to turn off the device.
5. Close the water connection.
6. Open the door and wait a few minutes before removing the dishes to allow them to cool and dry better.

WASHING PROGRAMMES

Program	Program number	Duration (minutes)
Pre-wash	1	10
Normal wash + pre-wash	2	115-125
Normal wash	3	90-100
Quick wash	4	35-40