

OVEN SCHLOSSER

CONTROL PANEL SYMBOLS

	Fan
	Turbo + fan
	Bottom and top heat + fan
	Grill + fan
	Grill
	Top heat
	Bottom heat
	Rotating grill rod
	Fan + rotating grill rod
	Bottom and top heat
	Light
	Bottom heat + fan
	Grill + rotating grill rod
	Grill + light
	Manual
	Grill + light + rotating grill rod
	Light + rotating grill rod
	Fan + light

USE

1. Press the control knobs so that they appear on the control panel.
2. Adjust the desired temperature with the thermostat switch.
3. Select the appropriate oven function.
4. At the end of the cooking, turn both selectors to the 0 position.