


HOB

Control panel of the hob and oven

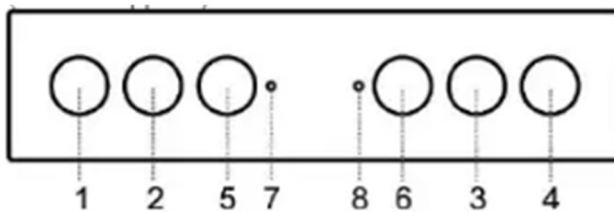

1. Cooking zone adjustment knob, left front
2. Cooking zone adjustment knob, left rear
3. Cooking zone adjustment knob, right rear
4. Cooking zone adjustment knob, right front
5. Oven cooking system selection knob
6. Oven temperature selector
7. Operation indicator light (yellow). Indicates that the oven or one of the cooking zones is in use.
8. Operation indicator light (red). Lights up when the oven heats up and turns off when the selected temperature is reached.

Cooking zone

The power of each cooking zone on the hob can be adjusted to levels 1-6 by turning the control knob of the selected cooking zone.

The residual heat indicator also lights up after switching off the cooking zone until the cooking zone cools down.

Do not use the ceramic stove as a storage tray!

OVEN

Use

1. To select a function, turn the cooking system knob (5) to the desired function. The setting can also be changed while using the oven.
2. Set the desired temperature with the oven temperature selector (6), the temperature range is 50-300°C. Turning the dial clockwise increases the temperature and counterclockwise decreases the temperature.
3. The oven is turned off by turning the knob of the cooking system to the "0" position.

NOTE! If the dial is forcibly turned past the "0" position, the result will be damage to the thermostat!