


## HOB SIEMENS AND COOKER HOOD

### COOKER HOOD

Before cooking, set the ventilation to boost power by pressing the BOOST button on the cooker hood. After this, the boost is automatically on for 60 minutes. If you want to stop boosting before this, press the BOOST button again, and boosting will end after 10 minutes.

#### Control panel

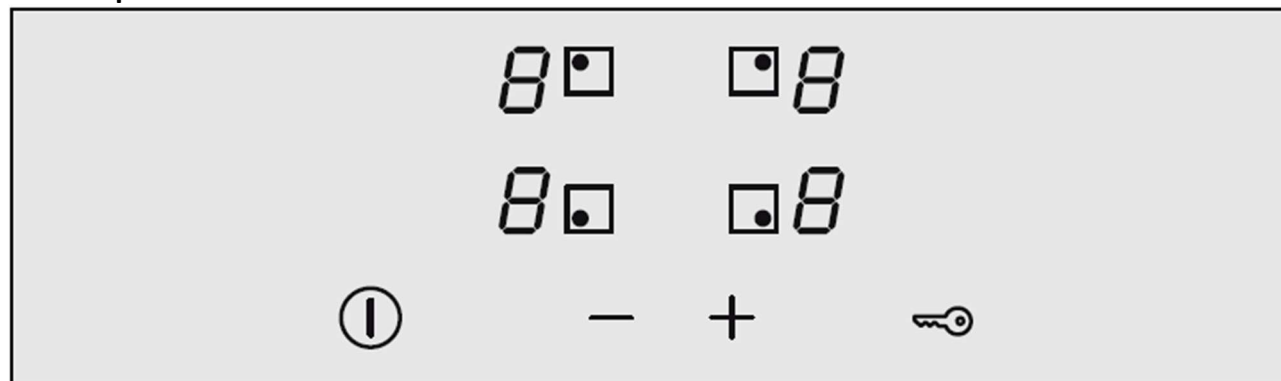

#### Displays

<i>1-9</i>	Heat settings
<i>H/h</i>	Residual heat

#### Controls

ⓘ	Main switch
🔑	Childproof lock
■	Hotplate selection
- +	Adjustment fields

#### Notes

- When you touch a symbol, the respective function is activated.
- Always keep the controls dry. Moisture reduces their effectiveness.
- Do not pull pans close to the displays and sensors. The electronics could overheat.


### Residual heat Indicator

The hob has a two-stage residual heat indicator for each hotplate.

If *H* appears in the display the hob is still hot. It may be used, for example, to keep a small meal warm or to melt cooking chocolate. As the hotplate cools down further, the display changes to *h*. The display remains lit until the hotplate has cooled sufficiently.

## DAILY USE

### Activating and deactivating the hob

The main switch  is used to switch the hob on (and off).

An audible signal sounds. The indicator light above the main switch and the 0 displays light up.

The hob is ready to use.

### Activating the hotplate and the heat setting

- Touch the hotplate selection symbol. 0 lights up in the display. Touch the + tai – symbol within the next 10 seconds to adjust the desired heat setting.
- 1 = lowest setting
- 9 = highest setting
- There is an intermediate setting between each heat setting. This is identified by a dot.
- The cooking zone can be switched off in two different ways:
  - Touch the hotplate selection symbol 2 times in a row. 0 appears on the display. After about 10 seconds, the residual heat display appears on the display.
  - Touch the hotplate selection symbol and then + tai – until 0 appears on the display. After about 10 seconds, the residual heat indicator will appear on the display.

 
### Automatic time limit


If hotplate has been switched on for a long time without the setting being changed, the automatic time limit is activated. The hotplate stops heating. F 8 and the H/h residual heat indicator flash alternately on the hotplate display. The display goes out when you touch any control. You can make new settings.

### Child proof lock

You can use the childproof lock to prevent children from switching on the hotplates.

The hob must be switched off.

To switch on: Touch the  symbol for approx. 4 seconds. The display light above the , symbol lights up for 10 seconds. The hob is locked.

To switch off: Touch the  symbol for approx. 4 seconds. The hob is unlocked.

