


## MICROWAVE BOSCH

Please note that metal containers are not suitable for microwave use!

### CONTROL PANEL

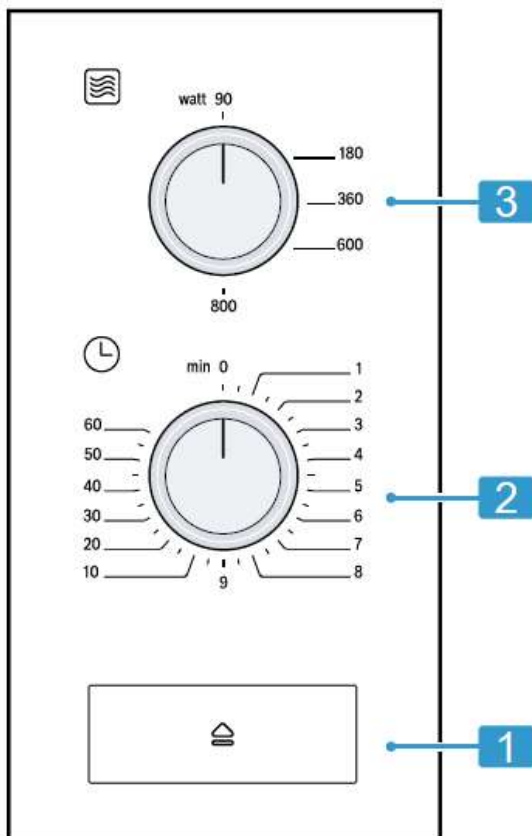

- 1 Door opener
- 2 Time selector
- 3 Power selector

### MICROWAVE POWERS

90	Defrosting food that require gentle handling
180	Defrosting food and further cooking
360	Cooking meat and fish or heating food that require gentle handling
600	Heating and cooking food
800	Heating liquid

### USE

1. Set the desired microwave power with the power selector.
2. Set the desired operating time with the time selector. If the desired operating time is less than 2 minutes, first select a longer time and then immediately go back to the desired operating time.

You can discontinue the function by opening the door of the device. The function continues when you close the door and the set operating time continues to elapse.

You can stop the function by setting the timer to 0.