


## MICROWAVE SIEMENS

Please note that metal containers are not suitable for microwave use!

### CONTROL PANEL

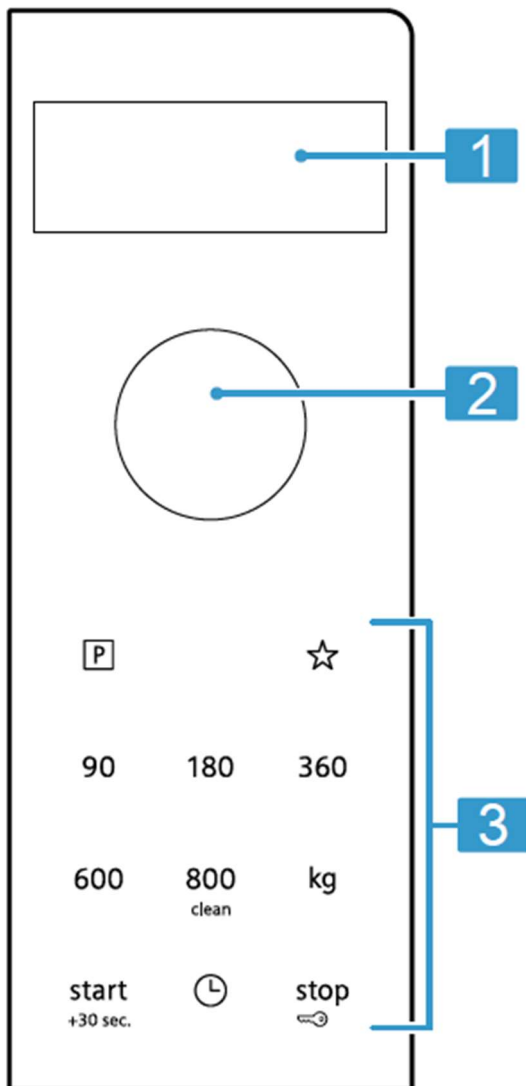

1. Display
2. Selector (to be rotated)
3. Touch fields

This is where you can find an overview of the different microwave power settings and when to use them.

Microwave power setting in watts	Use
90	Defrost delicate foods.
180	Defrost food and continue cooking.
360	Cooking meat and fish or heating delicate foods.
600	Heat and cook food.
800	Heat liquids.

## USE

1. Press the desired microwave power selector
2. Set the desired operating time with the rotary selector

### Extending the operating time

You can extend the set operating time at any time by pressing **start**. The operating time increases by 30 seconds with each press.

### Changing the cooking time

You can change the cooking time at any time. Use the rotary selector to set the required cooking time.

### Cancelling the operation

Press **stop** twice or open the door and press **stop** once.

### QuickStart

You can start the maximum power of the microwave oven with one dial. Press **start**. The maximum power of the microwave oven starts for 30 seconds. By pressing the **start** button again, you can extend the operating time by 30 seconds each time.