


## SAUNA

1. Press the On/Off –button.
2. The upper display shows three bars ( - - - ) and the lower display flashes digits 0.00. Press OK or wait 5 seconds.
3. When upper display stars flashing, set the temperature to 65 degrees with +/- buttons. Press OK or wait 5 seconds.
4. When the lower display starts flashing, set the time to 2.00 (2h) with +/- buttons. Press OK or wait 5 seconds.
5. Sauna is ready after 30 minutes.
6. Other function instructions can be found from manual book

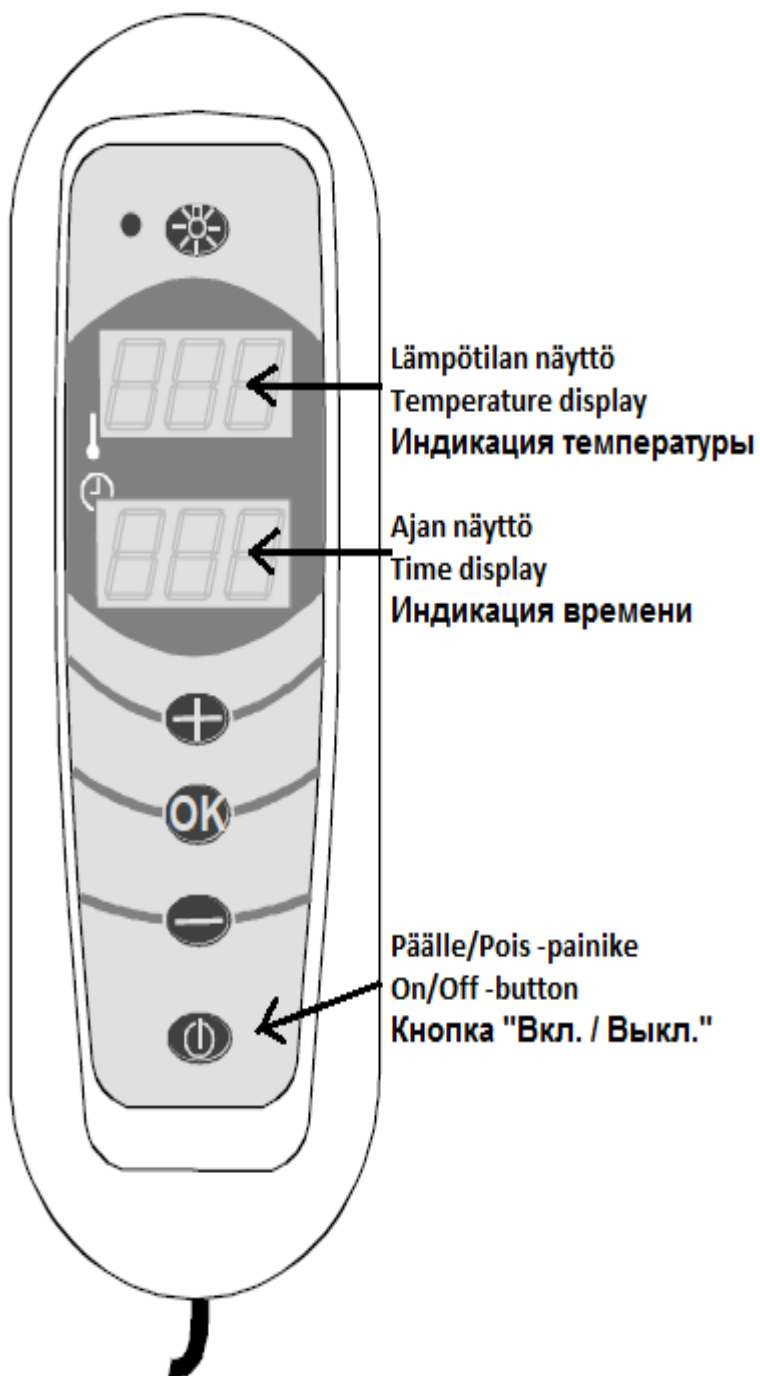

1. Нажмите кнопку "Вкл. / Выкл."
2. Верхний дисплей показывает три черточки ( - - - ), а на нижнем дисплее (дисплей времени) мигают цифры 0.00. Значение «по умолчанию» для этого параметра - 0.00 (т.е. электрокаменка включается сразу же после того, как заданы время и температура). Если вы хотите, чтобы электрокаменка влючилась после определенного периода времени, то каждый раз как вы включаете панель, вы жолжны задавать время.
3. Верхний дисплей начинает мигать. Это означает, что можно изменить температуру.
4. Далее начинает мигать нижний дисплей, что говорит о том, что можно изменить время.